


THE ULTIMATE INLINE FAN

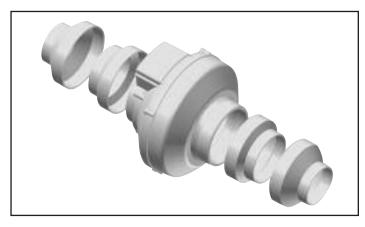

Model 99-NBQ-COMBI-4/5/6

General

Before installation, careful consideration must be given to how this system will operate if connected to any other piece of mechanical equipment. It is always important to assess how the operation of any air movement device may interact with vented combustion equipment (i.e. Gas Furnaces, Oil Furnaces, Wood Stoves, etc.).

NEVER install a ventilator in a situation where its normal operation, lack of operation or partial failure may result in the backdrafting or improper functioning of vented combustion equipment without proper safety/warning devices installed as required.

Table of Contents

General	1
Table of Contents	1
Specifications	3
Assembly	4-5
Installation	6
Mounting	6
Electrical	7
Troubleshooting	7
Maintenance	7
















Airia Quantum Series Inline fans are approved for both Residential and Commercial applications. The superior plastic resin is suitable for applications requiring fire rated materials and provides a quiet, weatherproof, versatile fan.

Plastic fans are suitable for either indoor OR outdoor installations and are suitable for temperatures of -40° F (-40°C) to 140°F (60°C).

A WARNING


Do not use fan where water can/will accumulate inside fan housing. When required – always use suitable electrical connections to prevent water from entering the fan housing.

For general ventilation only. DO NOT use this fan to exhaust hazardous or explosive material and vapors.

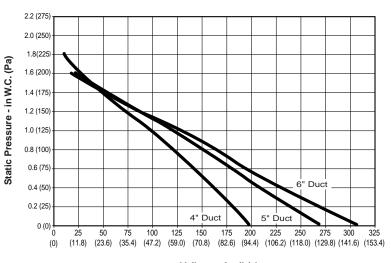

NBQ-COMBI-456 - Field Selectable 4", 5" or 6"

Airflow - cfm (L/s)

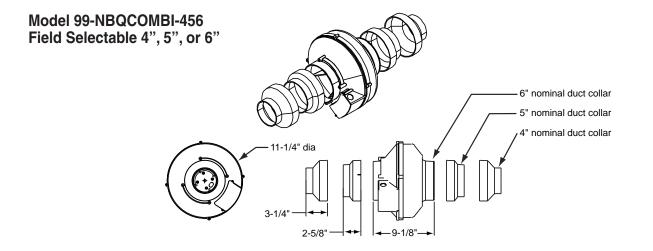

Assembly

The unique COMBI fan can be configured in either 4 inch, 5 inch, 6 inch, OR any combination of the three.

The collars will fit on the main housing with a tapered friction fit. No sealant is required. Locate screw slot on collar and use 1 - 1/4" hex head screw (supplied) per collar to secure collar in place.

Collars included with this fan

- 2 4" collars
- 2 5" collars

The following configurations are available:

Six Inch Dedicated (no collars required)



Five Inch Dedicated (attach 2 - 5" collars)





Four Inch Dedicated (attach 2 – 4" collars)





Combination

Example -- 4 inch and 5 inch collars. Any combination of sizes can be used.





Installation

Mounting

Fans can be mounted in ANY position (vertical, horizontal, or diagonal).


Option 1

A mounting bracket is included for securing the fan. Please observe the mounting 'bosses' on one end of the fan. All necessary hardware is included for mounting the fan with the supplied bracket (see Figure 1).




Option 2


Optional Stabilizing Mounting Clamps are available for mounting the fan. These clamps are designed to absorb mechanical vibration and provide a stable mounting point (see Figure 2).

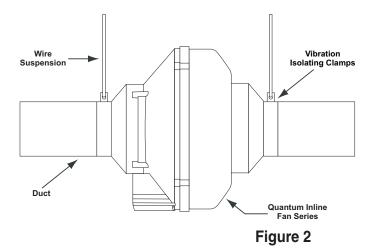


Option 3

The fan can be supported using standard hanging straps as illustrated. It is recommended to use a short piece of flexible ducting on each end of the fan to isolate any mechanical vibration. (see Figure 3).

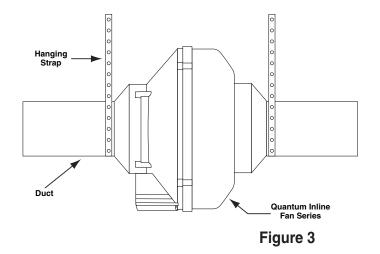

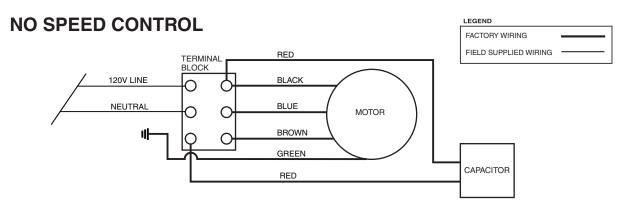

WITH SPEED CONTROL

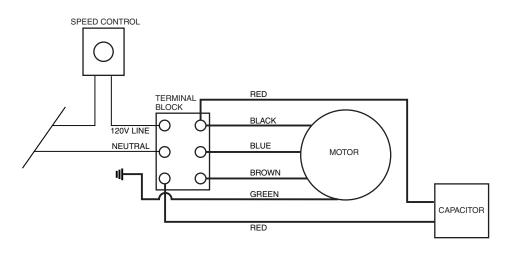

Troubleshooting

- Ensure 120 VAC supply to motor with Multi-Meter
- · Check wiring diagram to ensure proper connections
- Check continuity of motor with a Multi-Meter
- Disconnect capacitor and check capacitor with Multi-Meter

Maintenance

- Fan bearings are sealed and have an internal lubricating material, no lubrication is required.
- Once per year, remove any dust/dirt, debris from the impeller.



511 McCormick Blvd. London, Ontario N5W 4C8 T (519) 457-1904 F (519) 457-1676 Email: info@lifebreath.com 270 Regency Ridge, Suite 210 Dayton, Ohio 45459 T (937) 439-6676 F (937) 439-6685 Website: www.lifebreath.com



Disconnect all power sources before attempting any service.

