




## Mini-split installation is now a single person job!

Clips to the mounting bracket of most mini-split brands in order to hold unit securely in place during installation without damaging walls.



## Mighty Bracket<sup>™</sup>

## Mini-split installation support tool

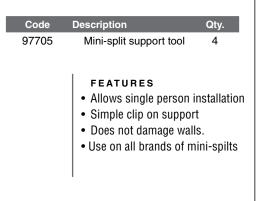

**Application** • Hook onto mini-split mounting plate to hold mini-split unit securely in place while installing refrigerant lines, condensate line and electrical hookup.

**User Instructions:** 1. Attach Mounting Hooks of Mighty Bracket to the mini-split mounting plate tabs. (If no tabs are present on the mounting plate, Mighty Bracket hooks can be attached by screws threaded into the wall stud.) 2. Place Foot Supports flat against the wall. (If necessary to avoid potential wall scratching, place clean towel or cardboard between support foot and wall surface)

3. Position Level Adjustment Pins to make Support Arm of the brackets horizontal. 4. Lift Gates at the end of Support Arms to make sure the unit cannot slide off. 5. Place protective Sleeve Socks over Gates to avoid scratching the unit. 6. Set unit securely onto the top of the Support Arms. 7. Connect refrigerant lines using RectorSeal<sup>®</sup> NoKink<sup>™</sup>.\* 8. Connect condensate drain piping and electrical wiring. 9. Carefully lift and place the indoor unit onto top tabs of mounting plate. 10. While ensuring unit does not fall, carefully remove Mighty Bracket and installation is complete.

\* When paired with RectorSeal® NoKink™ Mighty Bracket™ allows simple installation without damaging or kinking copper refrigerant lines.

